

P.O. BOX 265
OGDENSBURG, NY
U.S.A. 13669-0265
TEL: (315) 472-5270
FAX: (613) 226-2802

AVTECH ELECTROSYSTEMS LTD.

NANOSECOND WAVEFORM ELECTRONICS SINCE 1975

TEL: 1-800-265-6681 FAX: 1-800-561-1970

e-mail: info@avtechpulse.com http://www.avtechpulse.com P.O. BOX 5120 STN. F OTTAWA, ONTARIO CANADA K2C 3H4 TEL: (613) 226-5772 FAX: (613) 226-2802

INSTRUCTIONS

MODEL AVO-9E-C-TRF PULSE GENERATOR

S.N.:

WARRANTY

Avtech Electrosystems Ltd. warrants products of its manufacture to be free from defects in material and workmanship under conditions of normal use. If, within one year after delivery to the original owner, and after prepaid return by the original owner, this Avtech product is found to be defective, Avtech shall at its option repair or replace said defective item. This warranty does not apply to units which have been dissembled, modified or subjected to conditions exceeding the applicable specifications or ratings. This warranty is the extent of the obligation assumed by Avtech with respect to this product and no other warranty or guarantee is either expressed or implied.

TECHNICAL SUPPORT


Phone: 613-226-5772 or 1-800-265-6681 Fax: 613-226-2802 or 1-800-561-1970

E-mail: info@avtechpulse.com World Wide Web: http://www.avtechpulse.com

TABLE OF CONTENTS

WARRANTY	2
TABLE OF CONTENTS	3
FIG. 1: PULSE GENERATOR TEST ARRANGEMENT (AVX-S1 DISCONNECTED)	4
GENERAL OPERATING INSTRUCTIONS	5
FIG. 2: PULSE GENERATOR TEST ARRANGEMENT (AVX-S1 CONNECTED)	7
GENERAL DESCRIPTION	8
FIG. 3: FRONT PANEL CONTROLS	13
FRONT PANEL CONTROLS	14
FIG. 4: BACK PANEL CONTROLS	16
BACK PANEL CONTROLS	17
FIG. 5: SYSTEM BLOCK DIAGRAM	18
SYSTEM DESCRIPTION AND REPAIR PROCEDURE	19
PERFORMANCE CHECK SHEET	20

FIG. 1: PULSE GENERATOR TEST ARRANGEMENT (AVX-S1 MODULE DISCONNECTED)

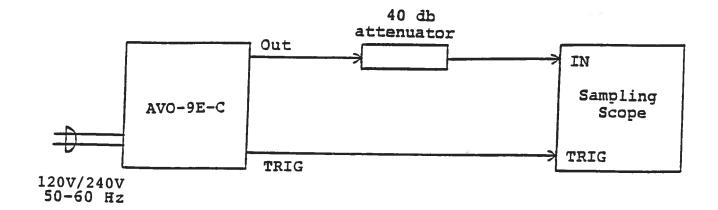

.

808

د ۱


GENERAL OPERATING INSTRUCTIONS

- 1) The bandwidth capability of components and instruments used to display the pulse generator output signal (attenuators, cables, connectors, etc.) should exceed one gigahertz.
- 2) The use of 40 db attenuator at the sampling scope vertical input channel will insure a peak input signal to the sampling scope of less than one volt.
- 3) The TRIG output channel provides a +0.5 V, 10 ns pulse.
- 4) To obtain a stable output display the PRF and PRF FINE controls on the front panel should be set mid-range while the PRF range switch may be in either range. The front panel TRIG toggle switch should be in the INT position. The front panel DELAY control and the scope triggering controls are then adjusted to obtain a stable output. It is recommended that the DELAY control first be set max counter clockwise and then turned clockwise until a stable display is obtained. The scope may then be used to set the desired PRF by rotating the PRF and PRF FINE controls and by means of the PRF range switch.
- 5) The output pulse width is controlled by means of the front panel one turn PW control. The control should initially be set maximum counter clockwise and the pulse width adjusted using an oscilloscope.
- 6) To voltage control the output pulse width, remove the jumper wire between banana plugs A and B on the back panel and apply 0 to +10V to connector B (RIN ≥ 10K). (EW option).
- 7) The output pulse amplitude is controlled by means of the front panel one turn AMP control.
- 8) To voltage control the output amplitude, remove the jumper wire between banana plugs A and B on the back panel and apply 0 to +10V to connector B (RIN ≥ 10K). (EA option).
- 9) An external clock may be used to control the output PRF of the AVO-9E unit by setting the front panel TRIG toggle switch in the EXT position and applying a 50 ns, or under, TTL level pulse to the TRIG BNC connector input. For operation in this mode, the scope time base must also be triggered by the external clock rather than from the TRIG output.

- 10) <u>WARNING</u>: Model AVO-9E-C may fail if triggered at a PRF greater than 10.0 MHz or at a duty cycle exceeding 20%.
- 11) <u>Dual Polarity Option</u>: To invert the output of the AVO-9E unit, connect the IN PORT of the AVX-3 unit to the OUT port of the AVO-9E mainframe. An inverted pulse is then obtained at the OUT port of the AVX-3 unit.
- 12) The rise and fall time are switched from the high to low range by means of the TR and TF two position switches. (TRF option.)
- 13) The monitor output (-M) provides a 20 dB attenuated coincident replica of the main output. (option).
- 14) AVO-9E-C units with a serial number higher than 5600 are protected by an automatic overload protective circuit which controls the front panel overload light. If the unit is overloaded (by operating at an exceedingly high duty cycle or by operating into a short circuit), the protective circuit will turn the output of the instrument OFF and turn the indicator light ON. The light will stay ON (i.e. output OFF) for about 5 seconds after which the instrument will attempt to turn ON (i.e. light OFF) for about 1 second. If the overload condition persists, the instrument will turn OFF again (i.e. light ON) for another 5 seconds. If the overload condition has been removed, the instrument will turn on and resume normal operation. Overload conditions may be removed by:
 - 1) Reducing PRF (i.e. switch to a lower range)
 - 2) Reducing pulse width (i.e. switch to a lower range)
- 15) The AVO-9E-C unit can be converted from 120 to 240V 50-60 Hz operation by adjusting the voltage selector card in the rear panel fused voltage selector-cable connector assembly.
- 16) For additional assistance:

Tel: 613-226-5772 Fax: 613-226-2802

FIG. 2: PULSE GENERATOR TEST ARRANGEMENT (AVX-S1 MODULE CONNECTED)

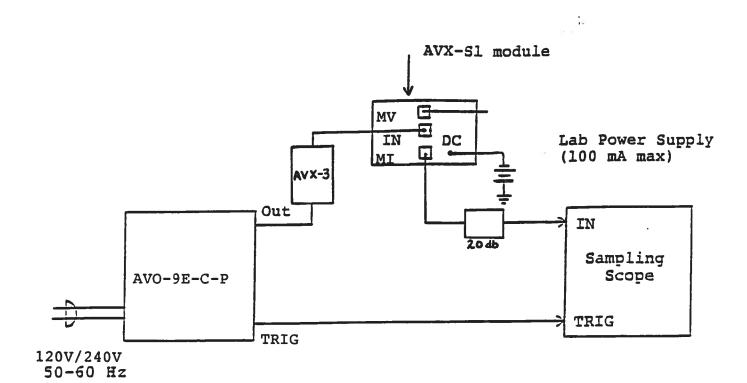

7

1

GENERAL DESCRIPTION

- 1) CAUTION: The AVO-9E-C mainframe (S.N. 8594) provides a positive output pulse. To employ S.N. 8594 with the TO 18 laser diode package shown in your fax of July 22, 1998, it is necessary to insert the AVX-3 module in the 50 Ohm line connecting the mainframe to the AVX-S1 output module. Without the AVX-S1 module, the laser diode package must be changed to one where the anode is connected to Pin 1 (of the AVX-S1 module) and the cathode is connected to Pin 2.
- 2) A general description of the AVX-S1 module is given in the enclosed data sheet.
- 3) The AVX-S1 module should be connected to the AVO-9E-C mainframe via the supplied 24" RG174 cable. The diode current may be monitored by connecting the MI and MV output ports to the sampling scope via a 20 db attenuator (MI option units only). The output amplitude (V₁, and V_{MV}, Volts) and diode current (I_D, Amp) are related as follows:

$$I_D = 0.2 (V_{MI} - V_{MV})$$

The laser diode voltage is given by the following:

$$V_{\rm D} = 10 (V_{\rm MV})$$

- 4) The laser diode plugs directly into the socket on the side of the AVX-S1 module.
- 5) A forward DC bias may be applied to the laser diode by connecting a DC potential of 0 to -5 volts to the DC solder terminal. The application of a small forward bias often yields a more ideal diode current waveform (as observed on the MI port). Note that the DC port must be shorted to ground if a bias is not applied.

9 ÷ 1 ł . . t i ł ł : 1 : ł ; i ī ł ł I. i MV : 1 . 1 . 5000 £ . ł ł 1 : ŕ 1 T. i • : : 1 1 ļ I I I f ; I ł . 1 н. 1.1 50 1.N. : 3.8 1 . Ł T. : : ÷ 1 : ł i . : : i Ĺ ÷ i ł ŧ i ÷ ÷ ÷ İ ÷ ŧ. : i i . £ : i : i : ł : ÷ i 4 20 I • . : : i ł ŧ i ! I. 1 ł. . L ł i ÷ i P • E : 1 . • . ļ î I. L i E Ē • • • i i ;. -; ł • : Ļ i. i MV 0 -: YN. 3 ø ME : 1 0 ! : 0 İ . : • 1 ÷ . . ŧ. ł ł i 1 i • . . 1 ī. . 1 1 i i 2 i ŧ ÷ ŧ ÷ I. : ł. : : -.

	2011	1010-0900-72	97 T-006 P.01			
VTECH		H ELECTRO	10 SYSTEMS LTD.			
P.O. BOX 265 OGDENSBURG, NY U.S.A. 13669-0205 TEL: (315) 472-5270 FAX: (813) 225-2802	TEL: 1-800 FAX: 1-800 s-mail: info@avi http://www.avis	-581-1970	E P.O. BOX 5120 STN. F OTTAWA, ONTARIO GANADA K2C 3H4 TEL: (813) 226-5772 FAX: (613) 226-2802			
Fax Ref. No:	3787	From: Avter	tech Electrosystems Ltd.			
To:	Meisho Corporation	- Our Fax No: 	(613) 225-2802			
-	÷	Date:	July 17, 1998			
Attn:	Y. Hashimoto / O. Shiroma	Receivers Fax No:	RECEIVED JUL 2 2 1998			
Рноле:	ка	No. of pages:	1			
Subject: F	O #ME98C009 & ME98C011	C.C.	· · · · · · · · · · · · · · · · · · ·			

Attn: Y. Hashimoto

Re: PO ME98C009

We need to know the required output polarity for the AVP-AV-1S-C. Please advise ASAP.

Attn: O. Shiroma Re: PO ME98C011

> We require a drawing of the diode package for the AVO-9E-C-TRF-PN. Please fax ASAP. (Dee page 65 of Cat. 10)

Thank you.

Regarda

Mary Budainch


Mary Budarick Sales Manager

TO-18 **\$2.54** *φ*0.45 Ž Three pin connection is like this. July 22 O. Shiroma


MB:pr

 ۹	Ŧ	•	\mathbf{v}		· 1	۱ 1

Model:								
MOGEI;	AVX-S1	AVX-S2	AVX-S3A	AVX-S3B	AVX-S3C	AVX-S3D		
Peak diode current:	400 mA	2 Amps	5 Amps	28 Amps	10 Amps	48 Amps		
Max. input amplitude:	20 volts	100 volts	150 volts	350 volts	150 volts	150 volts		
Pulse width (nsec):	0.4 - 200	1 - 1000	2 - 100	2 - 100	2 - 100	5 - 500		
Rise time (nsec):	0.2	0.5	0.5	1.0	0.5	2.0		
Pulse PRF range:	DC - 0.5 GHz	DC - 100 MHz	DC - 10 MHz	DC-10 MHz	DC - 10 MHz	DC - 1 MHz		
CW frequency range:	10 MHz - 1.0 GHz	1 - 200 MHz	•	-	• }	•		
Max. bias current:	100 mA	100 mA	100 mA	100 mA	100 mA	100 mA		
Max. bias voltage:	50 voits	50 volts	50 volts	50 volts	50 volts	50 volts		
Input impedance:	50 ohms	50 ohms	50 ohms	50 ohms	25 ohms	12 ohms		
N:	-	•	2	4	2	4		
Rs (ohms):	-	-	10	3	5	0.7		
IN connector:		SMA						
Monitor connector:		SMA						
Bias connector:		Solder pin						
Size (in):		1.6 x 2.6 x 3.0						
Material:	i	Cast aluminum, blue enamel						
Mounting:		Any						

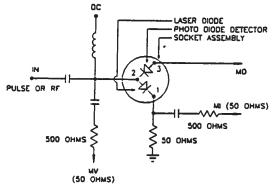





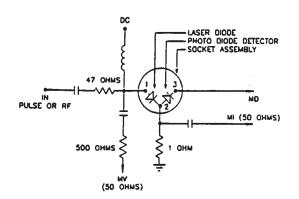

AVX-S2 FUNCTIONAL EQUIVALENT CIRCUIT

 AVX-S1 FUNCTIONAL EQUIVALENT CIRCUIT

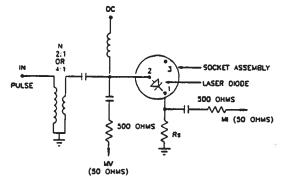



AVX-S3 INPUT ASSEMBLY (FOR OP-3 PACKAGE)

AVX-S3 FUNCTIONAL EQUIVALENT CIRCUIT

54

\$2.

TO-18

2


¢22

Li


đ

φ0.45

Ш

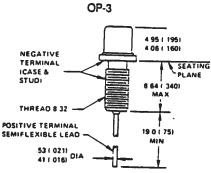



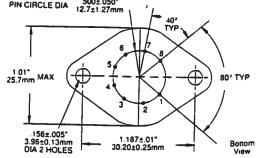

TYPICAL PACKAGES

11



1		<u> </u>					_		
а. С								t	
		DIOD		10 [°] A	₩P'/ [IV		$N \cdot \cdot$	
	(x,y_{2})	CURR	ENT	5.NS	EC / C	IV			
· · · ·									
		OPTIC OUTP						- 	
	X				-				

The AVX-S series of bias insertion units is designed for applying pulse or RF CW signals and DC bias to laser diodes which insert into a high quality socket included on the mount. The bias insertion module includes the necessary networks to match the laser diode to the pulse or RF source as well as networks for applying DC bias to the diode. Optional outputs allow for monitoring of the laser diode current, voltage and a photo detector diode output. Readily available socket configurations (TO-18, TO-5, TO-3, OP-3) are shown on the following page. Note that the laser diodes are not supplied with the AVX-S series.

The AVX-S series includes 3 basic models namely the AVX-S1, AVX-S2 and the AVX-S3. The basic functional equivalent circuit for the three models are shown below. Model AVX-S1 is specifically designed for ultra high-speed, low current applications (rise times as low as 200 psec, bandwidths to 1 GHz, I < 1.0 ampere). Model AVX-S1 is employed in the AVO-9-C series of diode drivers. Model AVX-S2 is intended for application with rise times greater than 2 nsec and currents above 1 ampere. Model AVX-S3 is specifically designed for use with the AVO-2 and AVO-5 series pulse generators (which provide currents in the range of 5 to 50 amperes).


The input series blocking capacitor in Models AVX-S1 and AVX-S2 presents a low impedance to RF CW signals and to baseband pulses while the shunt indicator presents a high impedance to RF (or pulse) signals but an extremely low impedance to the DC bias. The resistor in series with the laser diode is selected to insure that the impedance at the IN port is 50 ohms. Normally a laser diode resistance of 3 ohms is assumed.

The optional diode current monitor (M_{I}) provides an output waveform (to 50 ohms) which is an attenuated replica of the laser diode current. The output amplitude (V_{MI} , volts) and diode current (ID, Amps) are related as follows:

S1:
$$I_D = 0.2V_{MI}$$
 -S2: $I_D = V_{MI}$

The optional diode voltage monitor (MV) provides an output waveform that may be related to the voltage across the laser diode (V_D , volts) as follows:

-S1: $V_D = 10 (V_{MV} - V_{MI})$ -S2: $V_D = 10 V_{MV}$

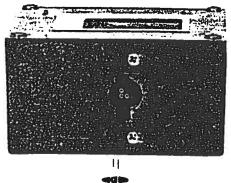

. 1

P.O. BOX 265 OGDENSBURG NEW YORK 13669 (315) 472-5270 12

WINSS SHOW DOWN

LASER DIODE BIAS

- Socket mounting of laser diodes
- Peak currents from 100 mA to 40 Amps
- Pulse widths from 0.4 to 200 nsec
- Rise times from 0.2 to 2.0 nsec
- Pulse or CW RF
- Diode current and voltage monitor options

Model AVX-S3 is available in four different versions (AVX-S3A, AVX-S3B, AVX-S3C and AVX-S3D) all of which include a matching transformer which effectively boosts the laser diode current beyond that provided by the pulse source.

Model AVX-S3A is designed to match 50 ohm pulse generators such as Model AVO-2-C to 12 ohm loads with peak currents of 5 amperes. Consequently, the resistor R_S in the equivalent circuit for this model is 12 ohm. This resistor is accessible in all AVX-S3 models and may be changed by the user (by desoldering). The series resistance of the laser diode and the resistor R_S must equal the pulse generator source impedance divided by N⁻. Consequently, if the series resistance of the laser diode is relatively high, it then may be necessary to reduce the value of R_S. Model AVX-S3B is designed to match 50 ohm pulse generators such as Model AVO-5-C to 3 ohms and will provide peak diode currents up to 28 amperes. Model AVX-S3C is designed to match Models AVO-2W-C and AVO-2-C (25 ohm source impedance) to load resistance of about 5 ohms and will provide peak diode currents as high as 10 amperes. Model AVX-S3D is designed for use with Model AVO-5B-C and will provide up to 48 amperes of diode current.

Two optional SMA output connectors provide attenuated coincident replicas of the diode current (-MI option) and diode voltage (-MV option) as per the following relationships (Amps, Volts):


$$I_D = \frac{10 V_{MI}}{R_S}$$
 $V_D = 10 (V_{MV} - V_{MI})$

All AVX-S3 units include two foot long input cables with SMA male connectors.

When ordering members of the AVX-S family, the customer must specify the basic model number (eg. AVX-S1) and the following additional information.


- a) Diode package type (eg. TO-18) and the required pin connections (eg. anode, cathode, ground etc). See the following page for readily available package mounting. Contact Avtech for special or different packages.
- b) Desired options (eg. -MI, -MV, -MD).

Contact Avtech for your special requirements.

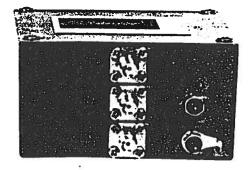

and the second second

FIG. 3: FRONT PANEL CONTROLS

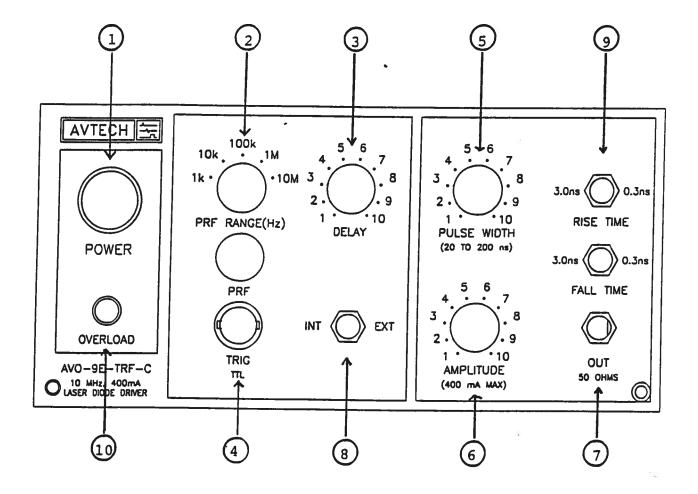

.

FRONT PANEL CONTROLS

- (1) <u>ON-OFF Switch</u>. Applies basic prime power to all stages.
- (2) <u>PRF Control</u>. PRF RANGE and PRF controls determine output PRF as follows:


PRF MIN PRF MAX

Range 1	100 Hz	1 KHz
Range 2	1 KHz	10 KHz
Range 3	10 KHz	100 KHz
Range 4	100 KHz	1 MHz
Range 5	1 MHz	10 MHz

- (3) <u>DELAY Control</u>. Controls the relative delay between the reference output pulse provided at the TRIG output (4) and the main output (7). This delay is variable over the range of 0 to at least 100 ns.
- (4) <u>TRIG Output</u>. This output precedes the main output (7) and is used to trigger the sampling scope time base. The output is a +0.5V 10 ns (approx.) pulse capable of driving a fifty ohm load.
- (5) <u>PW Control</u>. A one turn control which varies the output pulse width.
- (6) <u>AMP Control</u>. A one turn control which varies the output pulse amplitude from 0 to max output to a fifty ohm load.
- (7) <u>OUT Connector</u>. SMA connector provides output to a fifty ohm load.
- (8) <u>EXT-INT Control</u>. With this toggle switch in the INT position, the PRF of the unit is controlled via an internal clock which in turn is controlled by the PRF and PRF FINE controls. With the toggle switch in the EXT position, the unit requires a 50 ns (or less) TTL level pulse applied at the TRIG input in order to trigger the output stages. In addition, in this mode, the scope time base must be triggered by the external trigger source.
- (9) <u>TR, TF, HIGH-LOW</u>. Two position switches to set TR (or TF) in HIGH and LOW ranges. (option TRF).
- (10) <u>OVERLOAD INDICATOR</u>: AVO-9E-C units with a serial number higher than 5600 are protected by an automatic overload protective circuit which controls the

front panel overload light. If the unit is overloaded (by operating at an exceedingly high duty cycle or by operating into a short circuit), the protective circuit will turn the output of the instrument OFF and turn the indicator light ON. The light will stay ON (i.e. output OFF) for about 5 seconds after which the instrument will attempt to turn ON (i.e. light OFF) for about 1 second. If the overload condition persists, the instrument will turn OFF again (i.e. light ON) for another 5 seconds. If the overload condition has been removed, the instrument will turn on and resume normal operation. Overload conditions may be removed by:

- 1) Reducing PRF (i.e. switch to a lower range)
- 2) Reducing pulse width (i.e. switch to a lower range)

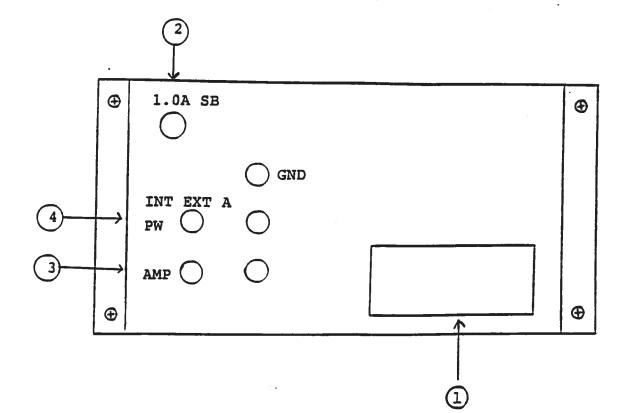

.

:


• .

.

BACK PANEL CONTROLS

- (1) <u>FUSED CONNECTOR, VOLTAGE SELECTOR</u>. The detachable power cord is connected at this point. In addition, the removable cord is adjusted to select the desired input operating voltage. The unit also contains the main power fuse (0.25 A SB).
- (2) <u>1.0A SB</u>. Fuse which protects the output stage if the output duty cycle rating is exceeded.
- (3) <u>EA</u>. To voltage control the output amplitude, set the switch in the EXT position and apply 0 to +10 Volts between terminal A and ground ($R_{IN} > 10K$). (option).
- (4) <u>EW</u>. To voltage control the output pulse width, set the switch in the EXT position and apply 0 to +10 Volts between terminal A and ground ($R_{IN} > 10K$). (option).

FIG. 5: SYSTEM BLOCK DIAGRAM

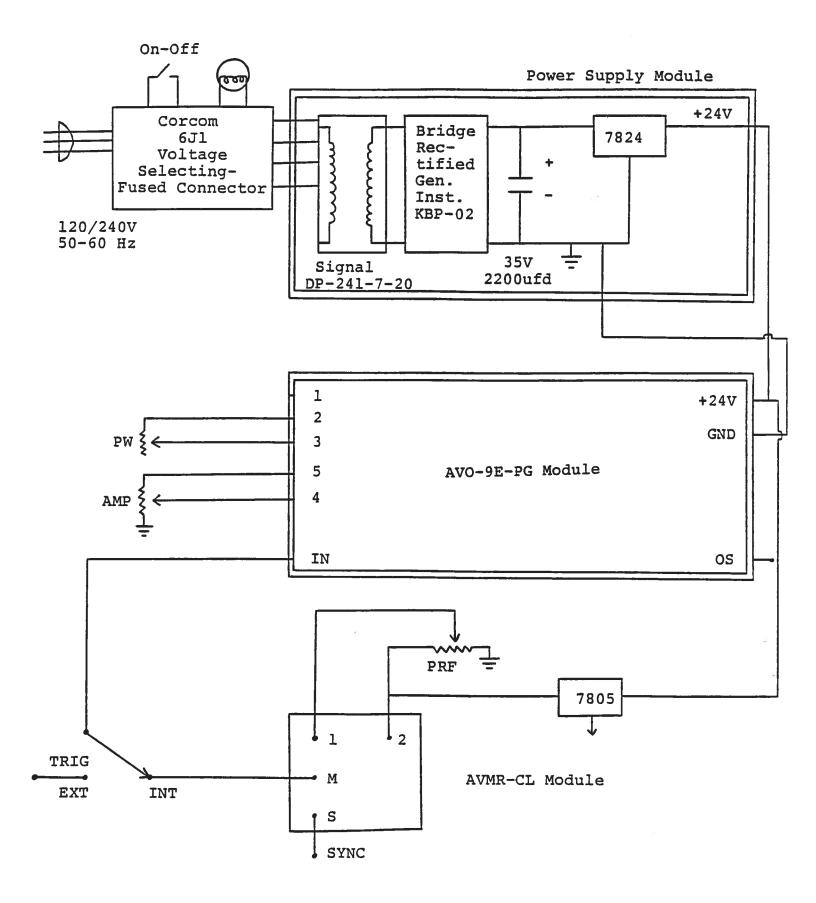

SYSTEM DESCRIPTION AND REPAIR PROCEDURE

The AVO-9E-C consists of a pulse generator module (AVO-9E-PG), a clock module (AVO-9E-CL) and a power supply board which supplies +24 Volts (600 mA max) to the pulse generator module. In the event that the unit malfunctions, remove the instrument cover by removing the four Phillips screws on the back panel of the unit. The top cover may then be slid off. Measure the voltage at the +24 V pin of the PG module. If this voltage is substantially less than +24 Volts, unsolder the line connecting the power supply and PG modules and connect 50 ohm 10 W load to the PS output. The voltage across this load should be about +24 V DC. If this voltage is substantially less than 24 volts the PS module is defective and should be repaired or replaced. If the voltage across the resistor is near 24 volts, then the PG module should be replaced or repaired. The sealed PG module must be returned to Avtech for repair (or replacement). The clock module provides a 20 ns TTL level trigger pulse at pin M to trigger the PG module and a 20 ns 0.5 V sync pulse at pin S to trigger the sampling scope display device. The output at pin S precedes the output at pin M by 0 to 100 ns depending on the DELAY control setting. With the INT-EXT switch in the EXT position, the clock module is disconnected from the PG module. The clock module is functioning properly if:

- a) 20 ns outputs are observed at pins M and S.
- b) The PRF of the outputs can be varied over the range of 10 Hz to 10 MHz using the PRF, PRF FINE and PRF RANGE controls.
- c) The relative delay between the pin M and S outputs can be varied by at least 100 ns by the DELAY control.

The sealed clock module must be returned to Avtech for repair or replacement if the above conditions are not observed.

Lolition B